



OPAQUE INTERIOR CANOPY LINER

Assembly Instructions | R1.110618

ASSEMBLY HARDWARE

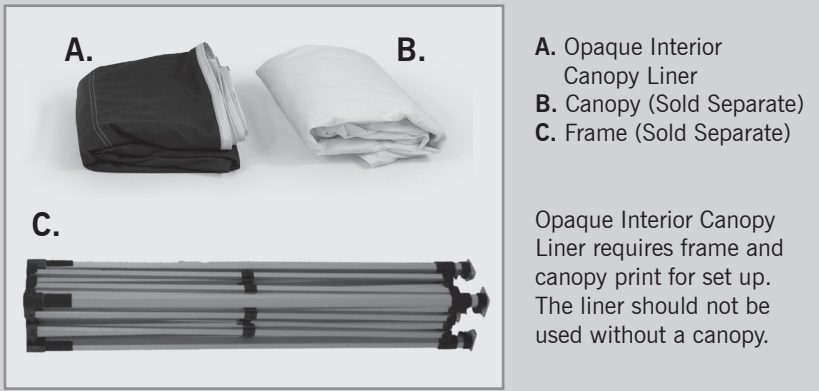

ASSEMBLY

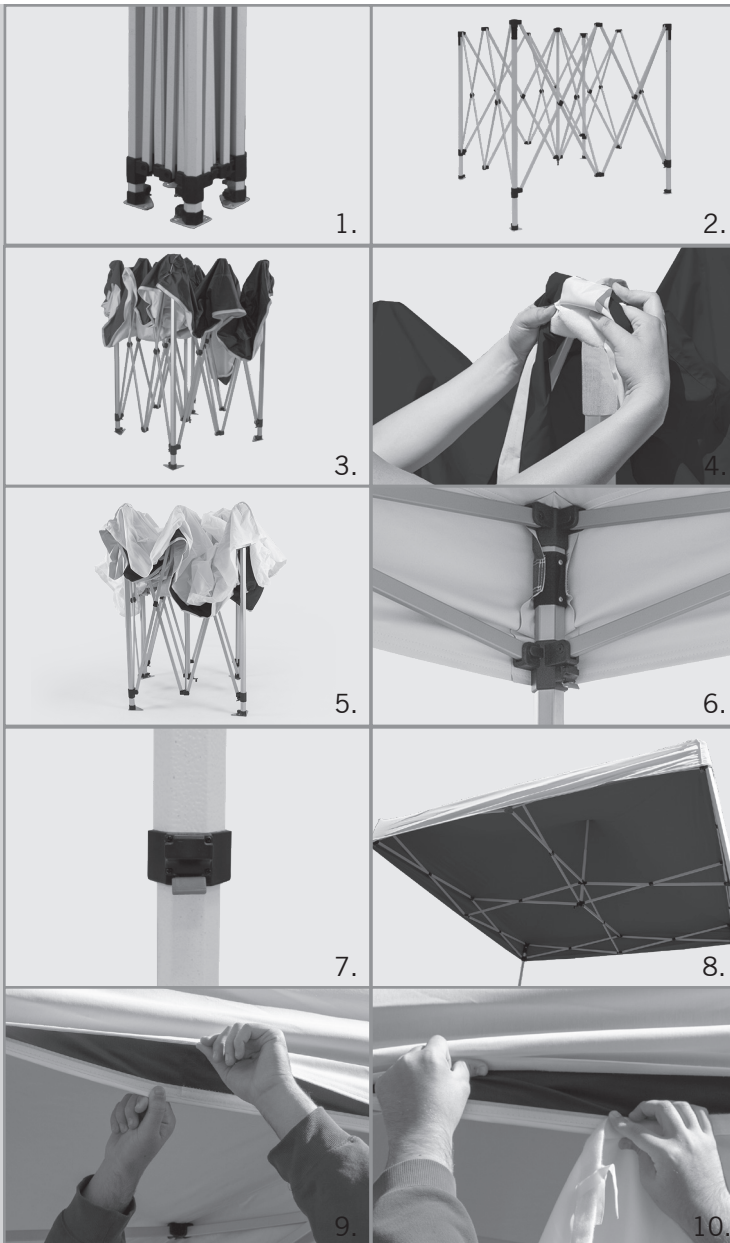

NOTE: It is recommended to use 2+ people for tent assembly.

1. Place the frame on the location chosen for assembly. Make sure the feet of the frame are on the ground.
- 2-3. Expand the frame outward, but not fully, and place the interior canopy liner over the frame. Make sure it is facing the correct direction and that the corners of the liner line up with the correct corners of the frame.
4. Attach the loop adhesive, located on the inside of the liner, to the hook adhesive around the top of the main posts.
5. Place the canopy over the canopy liner. Make sure it is facing the correct direction and that the corners of the print line up with the correct corners of the frame. Connect the loop fastener in the corner area of the canopy neatly to the hook fastener on the canopy liner. This ensures that frame, liner and canopy line up correctly when expanding the frame.
6. Completely expand the frame outward. The locking clips will snap into place to indicate full expansion of the frame.
7. Pull up the legs of the frame to the desired height, making sure the locking clips snap into place. Standing and using your foot to hold down the tent foot makes this step easier.
8. Extend the canopy to its full height by using the rooftop crank adjustment. This will also tighten the print for a wrinkle-free display.
9. Connect the canopy liner valances to the canopy valances by pressing the hook-and-loop fasteners together.
10. To install full walls, please follow the directions on the Tent Assembly Instructions. Sections of loop fasteners on the canopy liner valance and the loop fastener on the inside of the canopy valance allow the wall to be installed between both valances.

NOTE: Remove liner and print prior to collapsing and storing the frame. Do not store the frame with the liner and print attached.

DISCLAIMER: Tents should always be staked and/or weighted down and should not be used in inclement weather, including thunderstorms, heavy rains, lightning, and high winds. User must read and observe assembly instructions. If this is not done correctly, it may result in damage to the unit, injury, or death, and all warranties will be void. All warranties will be void if hardware is used with any print not produced by us. Due to the printing process, prints may be susceptible to scratching when not properly cared for. Coating to add additional protection from scratching is available as an upgrade. Prints should never be dragged along the ground or stored without being properly folded. Print must be removed from frame before storing away. Make sure print is completely dried from any weather, and fold and store in a clean, dry place.

