



# Portable Flagpole

R10.051013

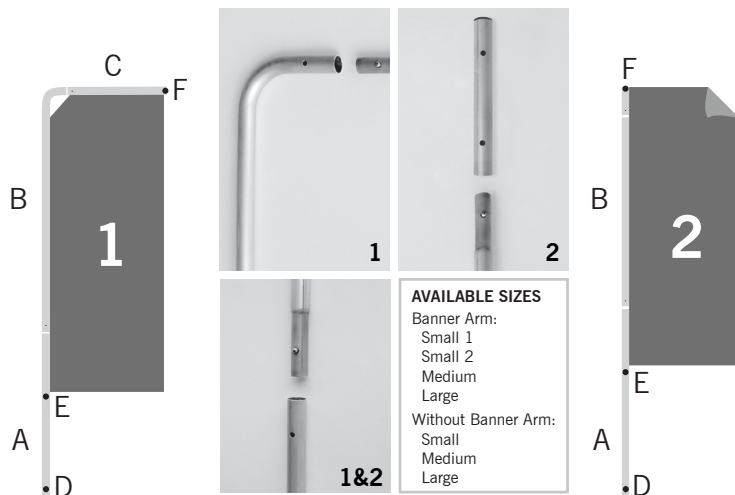


- Remove all components from the Economy Bag (or optional Carry Case) and examine to make sure all pieces are included and are not damaged.
- Insert pole A into the bottom of pole B. Press down on the button and slide pole A into pole B until the button is depressed into the pre-drilled hole.
- Repeat for all poles.

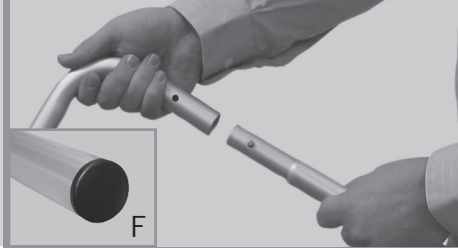


- Place End Cap F on the end of top pole.
- OPTIONAL BANNER ARM:**
- Take pole C and insert into pole B using method explained in Step 1 above. Place End Cap F on the end of banner arm.



- Slide the graphic down toward the bottom of the pole until fully fitted.
- OPTIONAL BANNER ARM:**
- Starting at the bottom of the graphic, slide the banner arm into the pole sleeve, around the corner and continue toward the bottom of the pole.

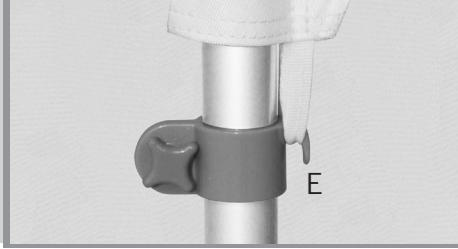


- Flag should be pulled taut and secured with tab to Clamp E.
- Mount pole onto provided base. (shown to the right)  
Use Connector D if applicable.

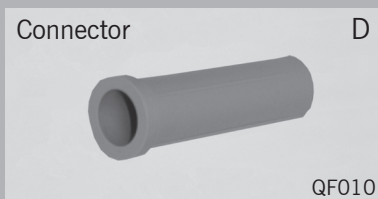

Connector has to be used with most bases shown to the right.








The Plastic Clip will secure the flag and can be easily re-positioned on the pole to adjust for different flag sizes.

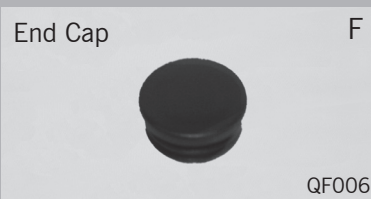

The End Cap will prevent unnecessary wear of the graphic once the frame system is assembled.

## Available Bases

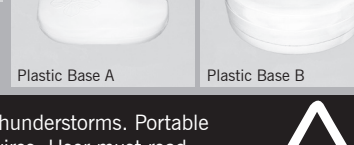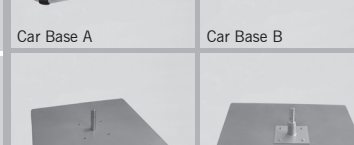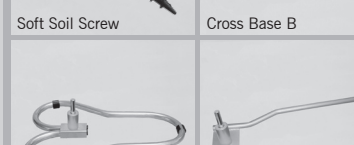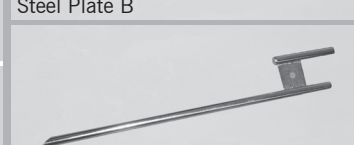 

Do not fly your Portable Flagpole in extreme winds (any wind speed exceeding what is listed below) and/or thunderstorms. Portable Flagpole: Single-Reverse: 25-30mph or 6bft, Double-Sided: 13-17mph or 4bft. Do not use near overhead wires. User must read and observe construction sheet. If this is not done correctly it may result in damage to the unit, injury, or death, and all warranties will be void. All warranties will be void if the Portable Flagpole hardware is used with any flag not produced by us.

