 


INFLATABLE PILLAR ASSEMBLY

Assembly Instructions | R1.06/07/21


ASSEMBLY HARDWARE

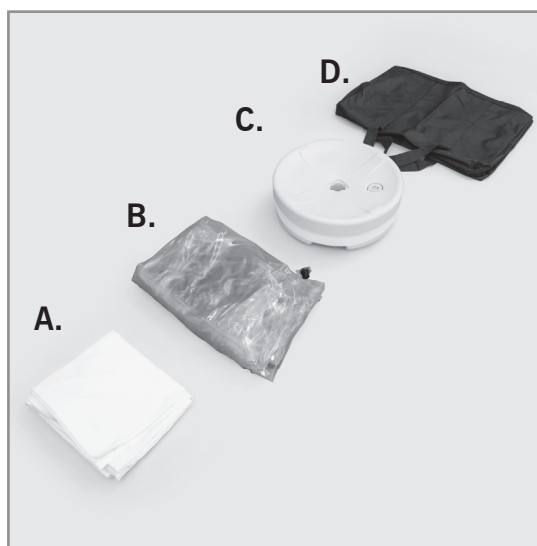

- A. Custom print
- B. Clear polyester inflatable core (flexible TPU)
- C. Water base
- D. Polyester carrying case



ASSEMBLY

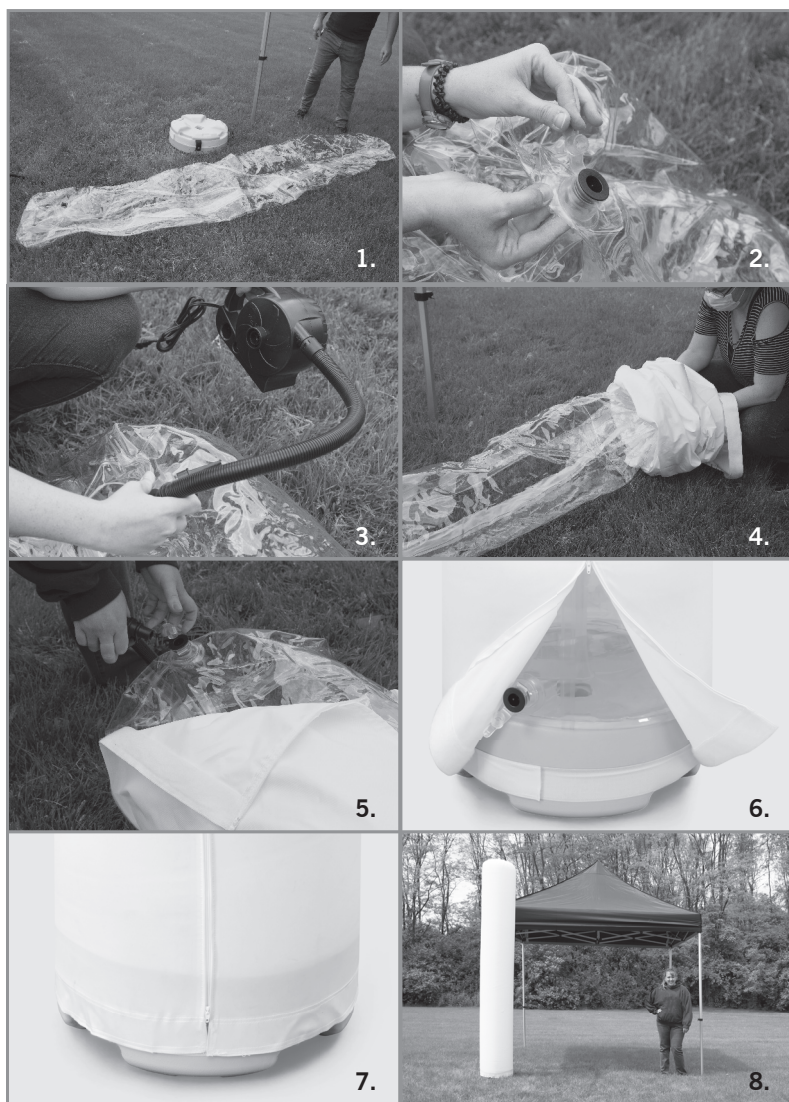

(We recommend at least 3 people to assembly the arches)

1. Lay out the inflatable core flat on the ground.
2. Find the valve so you can fill the core.
3. It is easily filled with an electric pump that attaches to the pump.
4. Fill the core halfway and then slip the inside-out print over the core.
5. Finish filling up the core.
6. Once the pillar is filled up, place it on the water base.
7. Secure the hook-and-loop fastener at the bottom and pull the zipper down until it is closed.
8. Your pillar is now ready to be used.