



ASSEMBLY HARDWARE

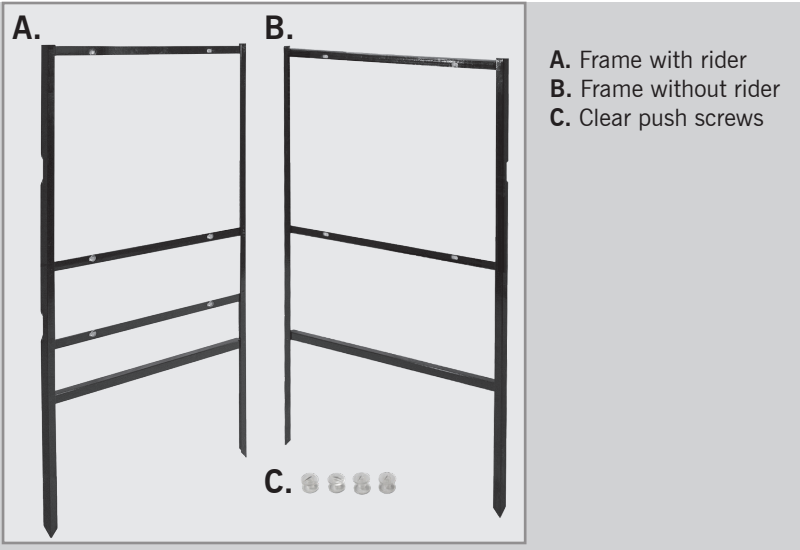

ASSEMBLY

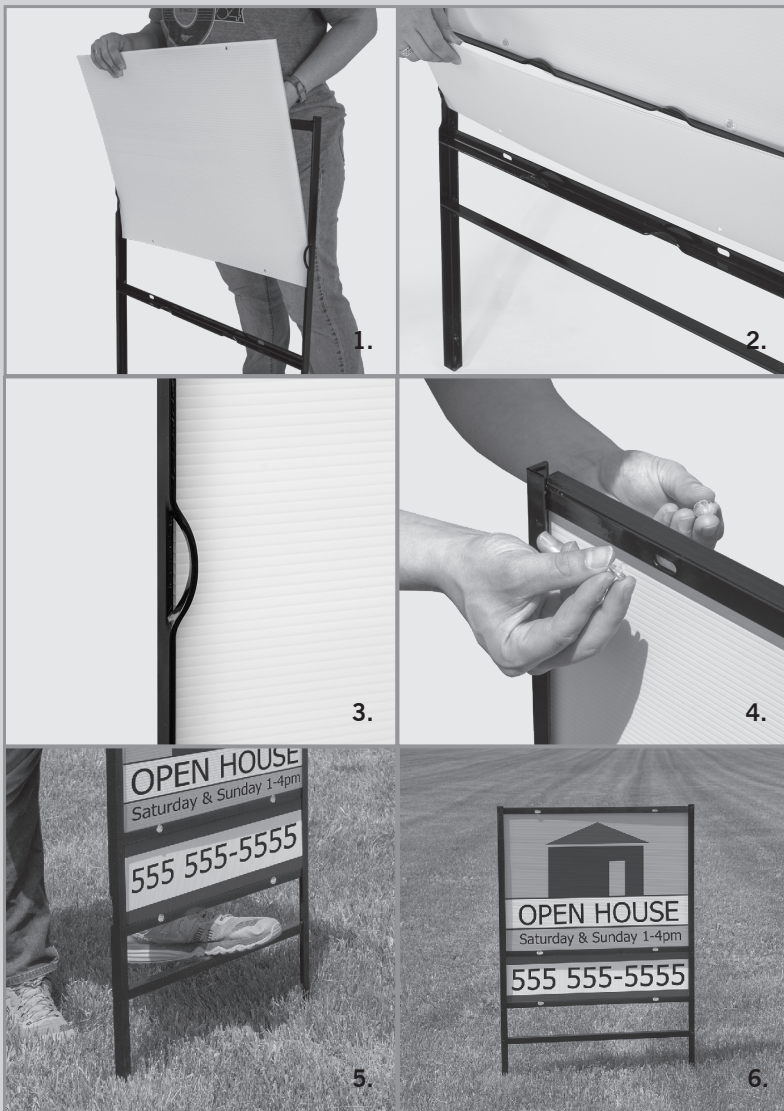

1-2. Slide the sign(s) into the indented section(s) of the hardware.

3. Make sure that the sign(s) are held in place with the half moon tabs placed over the sign(s).

4. Take the push screws and insert them into the holes on the frame. Make sure that these holes are lined up with the holes on the sign. This will keep the sign from moving around.

5. Mount the sign into the ground by pushing the bottom stakes into the soil by using your foot or a rubber mallet.

6. The real estate sign is now set-up.