
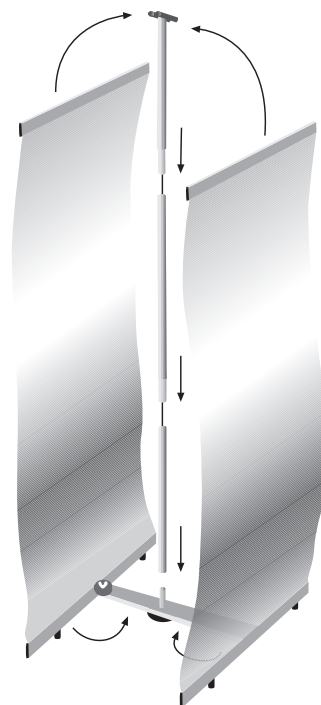



ASSEMBLY

1. Move the mounting arm until it is at a 90 degree angle. Tighten the wing nut to keep the arm in place.
2. Put the segmented pole together and place it on top of the mounting arm thorn.
3. Once the segmented pole is attached over the thorn, slightly angle the top rail and insert the plastic piece into the allotted area.

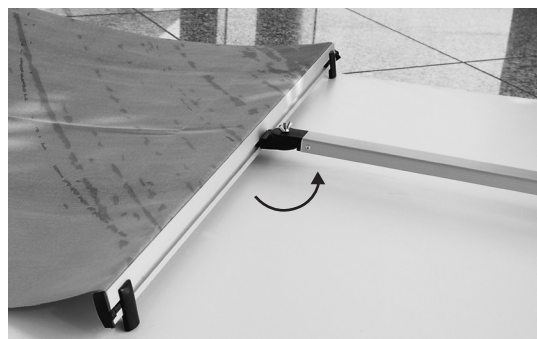

DS ASSEMBLY

1. Move the mounting arm until it is at a 90 degree angle. Tighten the wing nut on the first bottom rail to keep the arm in place.
2. Attach the second bottom rail to the mounting arm and tighten the wing nut.
3. Put the segmented pole together and place it on top of the mounting arm thorn.
4. Once the segmented pole is attached over the thorn, slightly angle the one of the top rails and insert the plastic piece into the allotted area.
5. Repeat Step D with the second print.

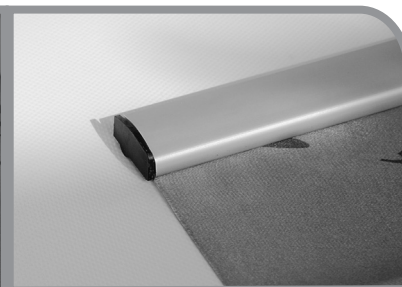

Open the clamping rail that will hold the print at the top. This is the rail that does not contain the mounting arm.

Lay the print out in front of the clamping rail before inserting.

Place print into the clamping rail, keeping it taut.

Close the clamping rail.

Repeat steps for bottom clamping rail.