

## **BARRIER COVERS**


Assembly Instructions | R1.0201324

## ASSEMBLY HARDWARE

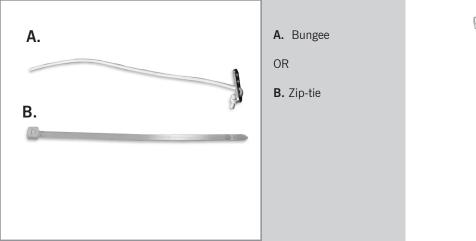

## ASSEMBLY

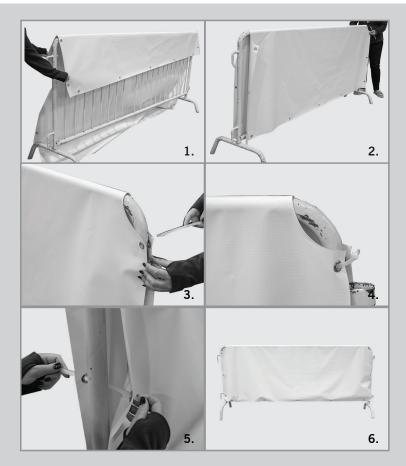

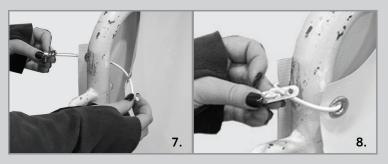



1. Open (fabric) or unroll (vinyl) the print and place it over the hardware.

2. Line the banner up so that it is even on both sides of the barrier.

3. Thread the zip-tie through the grommet, behind the barrier bar, and out the other side through the grommet.

4. Close the zip-tie. (don't close it too tight so you can cut it off once finished with it)

5. Repeat step 3 and 4 down both sides and the bottom of the barrier cover.

6. Your barrier cover is ready to use!

7. If you got the bungee, thread it the same way as the zip-tie.

8. Secure the bungee in the tensioner. Once you have repeated this on both sides and the bottom, then your barrier cover is ready to use!