

ASSEMBLY HARDWARE

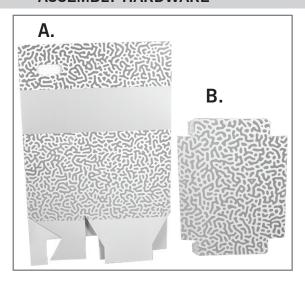

- A. DUMP BIN
- **B. OPTIONAL LID**




ASSEMBLY

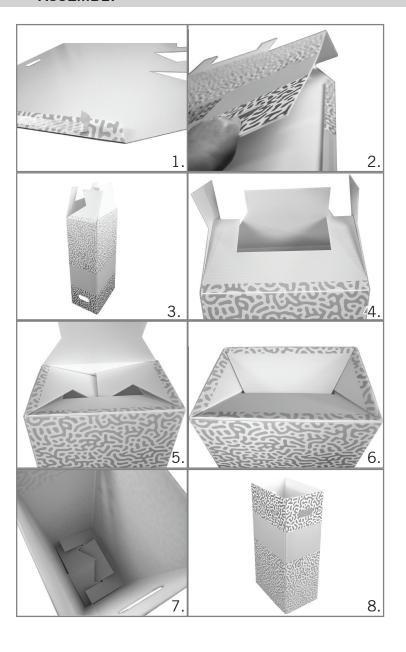

ASSEMBLY

- 1. Dump bin ships flat. Carefully fold along the creases to prep the bin for assembly.
- Remove the protective cover from the adhesive tape and fold the other side of the bin down. Press firmly to bind both sides together.
- **3.** Flip bin upside down to close the bottom.
- **4.** Fold the piece with the square in the middle down first.
- **5.** Take the two side panels and tuck them into the bottom panel.
- **6.** The last panel will then fold over the side panels and then tuck it into the bottom panel.
- 7. Turn the dump bin back upright and push down in the center of the bottom. That way it locks correctly.
- 8. Your dump bin is ready to use!

OPTIONAL LID ASSEMBLY

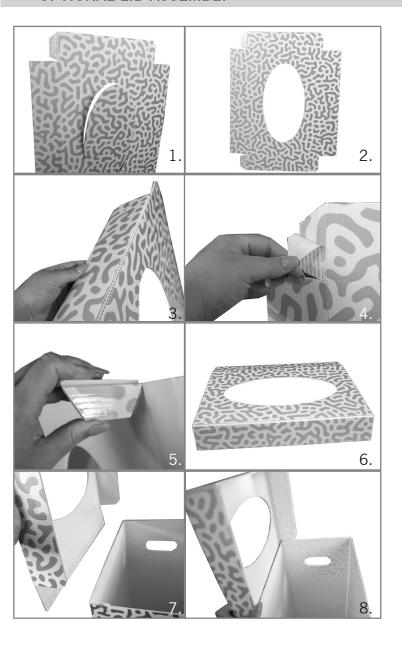

ASSEMBLY

- If you received a lid without a hole, you could skip the first two steps. Carefully push the center of the lid.
- 2. Remove the center to create an oval hole in the lid.
- 3. Gently crease all edges to prepare to put the lid together.
- Peel off the cover of the adhesive located on the small tab of the lid.
- **5.** Bend the small tab and the larger tab and then hold them together so that the adhesive binds them together.
- **6.** Repeat step 5 on the other side of the lid.
- 7. Remove the cover to the adhesive at the back of the lid and then line it up with the dump bin.
- 8. Your dump bin with lid is ready to go!